# 2M x 32Bits x 4Banks Mobile Synchronous DRAM

# Advanced Information

# Description

These IS42/45VM32800M are mobile 268,435,456 bits CMOS Synchronous DRAM organized as 4 banks of 2,097,152 words x 32 bits. These products are offering fully synchronous operation and are referenced to a positive edge of the clock. All inputs and outputs are synchronized with the rising edge of the clock input. The data paths are internally pipelined to achieve high bandwidth. All input and output voltage levels are compatible with LVCMOS.

# Features

- JEDEC standard 1.8V power supply
- Auto refresh and self refresh
- All pins are compatible with LVCMOS interface
- 4K refresh cycle every 16ms (A2 grade) or 64 ms (Industrial, A1 grade)
- Programmable Burst Length and Burst Type
  - 1, 2, 4, 8 or Full Page for Sequential Burst
  - 4 or 8 for Interleave Burst
- Programmable CAS Latency : 2, 3 clocks

- All inputs and outputs referenced to the positive edge of the system clock
- Data mask function by DQM
- Internal 4 banks operation
- Burst Read Single Write operation
- Special Function Support
  - PASR(Partial Array Self Refresh)
  - Auto TCSR(Temperature Compensated Self Refresh)
  - Programmable Driver Strength Control
    - Full Strength or 3/4, 1/2, 1/4, 1/8 of Full Strength
  - Deep Power Down Mode
- Automatic precharge, includes CONCURRENT Auto Precharge Mode and controlled Precharge

Copyright © 2023 Integrated Silicon Solution, Inc. All rights reserved. ISSI reserves the right to make changes to this specification and its products at any time without notice. ISSI assumes no liability arising out of the application or use of any information, products or services described herein. Customers are advised to obtain the latest version of this device specification before relying on any published information and before placing orders for products.

Integrated Silicon Solution, Inc. does not recommend the use of any of its products in life support applications where the failure or malfunction of the product can reasonably be expected to cause failure of the life support system or to significantly affect its safety or effectiveness. Products are not authorized for use in such applications unless Integrated Silicon Solution, Inc. receives written assurance to its satisfaction, that:

a.) the risk of injury or damage has been minimized;

b.) the user assume all such risks; and

c.) potential liability of Integrated Silicon Solution, Inc is adequately protected under the circumstances

1

# Figure 1: 90Ball FBGA Ball Assignment


	1	2	3	4	5	6	7	8	9
А	DQ26 (	Q24	VSS				VDD	DQ23	(DQ21)
В	DQ28 (V	'DDQ	VSSQ	1			VDDQ	VSSQ	(DQ19)
С	VSSQ (	Q27	DQ25				(DQ22)	DQ20	(VDDQ)
D	VSSQ (	Q29	DQ30	)			(DQ17)	DQ18	(VDDQ)
Е		Q31	NC	)			NC	(DQ16)	(VSSQ)
F	VSS (	QM3	(A3)	1			A2	DQM2	VDD
G	(A4) (	A5	(A6)	)			(A10)	AO	A1
Н	A7 (	A8	NC	1			NC	BA1	(A11)
J	CLK (	CKE	(A9)	1			BAO	/CS	(/RAS)
к	DQM1)	NC	NC	)			(/CAS)	(/WE)	(DQMO)
L	VDDQ (	DQ8	VSS	)			VDD	DQ7	(VSSQ)
М	VSSQ (	Q10	DQ9	)			DQ6	DQ5	(VDDQ)
Ν	VSSQ (	Q12	DQ14	)			DQ1	DQ3	(VDDQ)
Ρ	(DQ11) (v	DDQ	VSSQ	)			(VDDQ)	(VSSQ)	DQ4
R	DQ13 (	Q15	VSS	)			VDD	DQ0	DQ2

[Top View]


# Table 1: Pin Descriptions

Pin	Pin Name	Descriptions
CLK	System Clock	The system clock input. All other inputs are registered to the SDRAM on the rising edge CLK.
СКЕ	Clock Enable	Controls internal clock signal and when deactivated, the SDRAM will be one of the states among power down, suspend or self refresh.
/CS	Chip Select	Enable or disable all inputs except CLK, CKE and DQM.
BA0~BA1	Bank Address	Selects bank to be activated during RAS activity. Selects bank to be read/written during CAS activity.
A0~A11	Address	Row Address: RA0~RA11Column Address: CA0~CA8Auto Precharge: A10
/RAS, /CAS, /WE	Row Address Strobe, Column Address Strobe, Write Enable	RAS, CAS and WE define the operation. Refer function truth table for details.
DQM0~DQM3	Data Input/Output Mask	Controls output buffers in read mode and masks input data in write mode.
DQ0~DQ31	Data Input/Output	Data input/output pin.
VDD/VSS	Power Supply/Ground	Power supply for internal circuits and input buffers.
VDDQ/VSSQ	Data Output Power/Ground	Power supply for output buffers.
NC	No Connection	No connection.




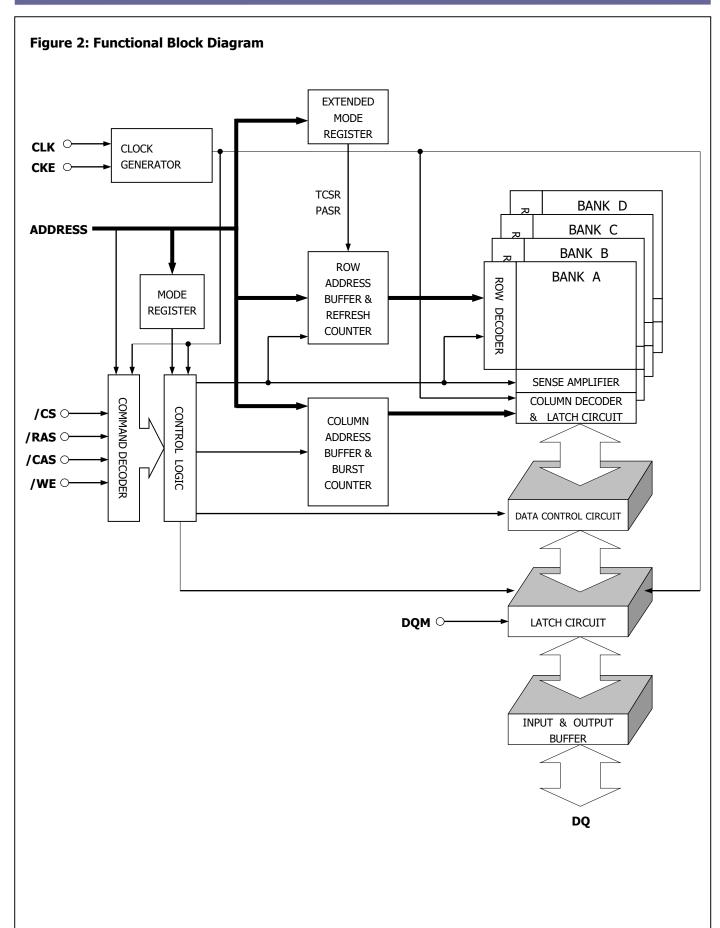



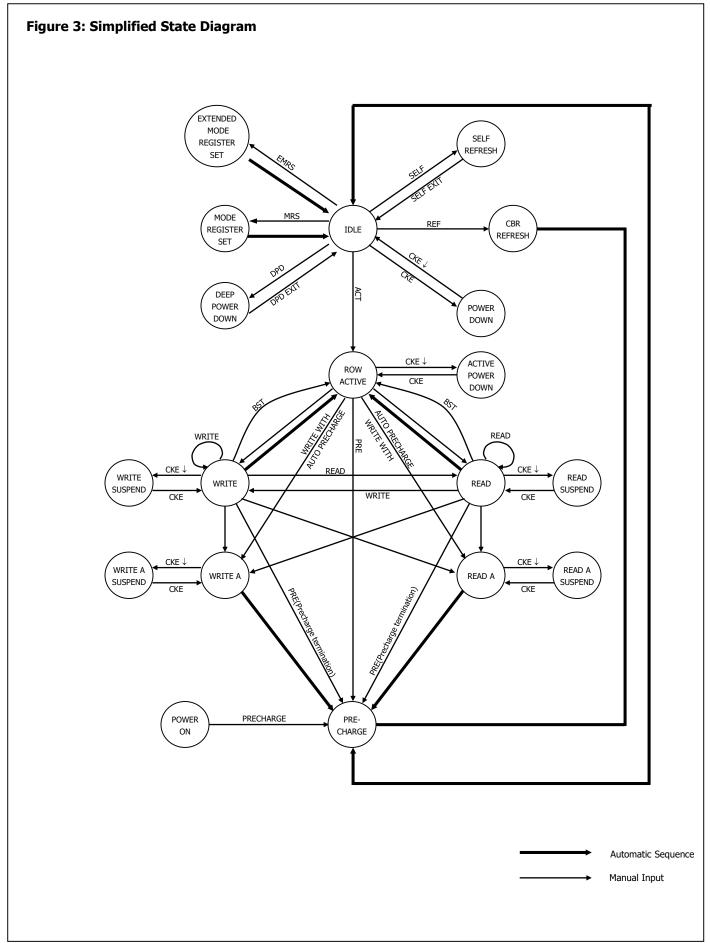



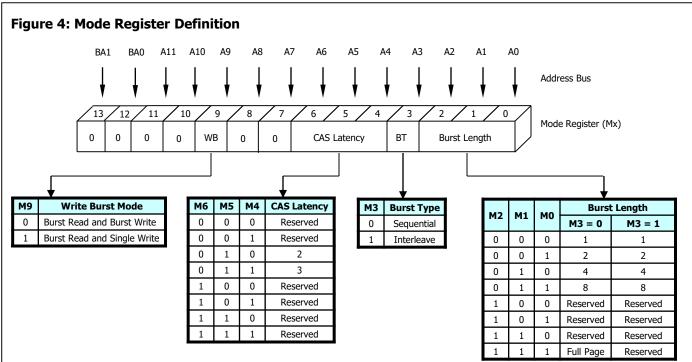

Note: M13 (BA1) and M12 (BA0) must be set to "0" to select Mode Register (vs. the Extended Mode Register)

#### **Burst Type**

Accesses within a given burst may be programmed to be either sequential or interleaved; this is referred to as the burst type and is selected via bit M3. The ordering of accesses within a burst is determined by the burst length, the burst type and the starting column address, as shown in Table 2.


Burst	Starti			Order of Access	s Within a Burst
Length	A0 A2	ddress A1	A0	Sequential	Interleaved
			0	0-1	0-1
2			1	1-0	1-0
		0	0	0-1-2-3	0-1-2-3
4	0 1		1	1-2-3-0	1-0-3-2
4		1	0	2-3-0-1	2-3-0-1
		1	1	3-0-1-2	3-2-1-0
	0	0	0	0-1-2-3-4-5-6-7	0-1-2-3-4-5-6-7
	0	0	1	1-2-3-4-5-6-7-0	1-0-3-2-5-4-7-6
	0	1	0	2-3-4-5-6-7-0-1	2-3-0-1-6-7-4-5
8	0	1	1	3-4-5-6-7-0-1-2	3-2-1-0-7-6-5-4
0	1	0	0	4-5-6-7-0-1-2-3	4-5-6-7-0-1-2-3
	1	0	1	5-6-7-0-1-2-3-4	5-4-7-6-1-0-3-2
	1	1	0	6-7-0-1-2-3-4-5	6-7-4-5-2-3-0-1
	1	1	1	7-0-1-2-3-4-5-6	7-6-5-4-3-2-1-0
Full Page		=A0-8 tion 0-	511)	C <sub>n</sub> , C <sub>n</sub> +1. C <sub>n</sub> +2, C <sub>n</sub> +3, C <sub>n</sub> +4 C <sub>n</sub> -1, C <sub>n</sub>	Not Supported

#### **Table 2: Burst Definition**

#### Note :

- 1. For full-page accesses: y = 512
- 2. For a burst length of two, A1-A8 select the blockof-two burst; A0 selects the starting column within the block.
- 3. For a burst length of four, A2-A8 select the blockof-four burst; A0-A1 select the starting column within the block.
- 4. For a burst length of eight, A3-A8 select the block-of-eight burst; A0-A2 select the starting column within the block.
- 5. For a full-page burst, the full row is selected and A0-A8 select the starting column.
- 6. Whenever a boundary of the block is reached within a given sequence above, the following access wraps within the block.
- 7. For a burst length of one, A0-A8 select the unique column to be accessed, and mode register bit M3 is ignored.



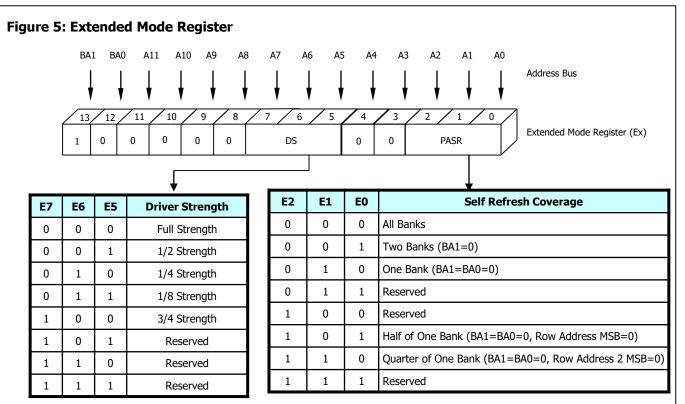

Note: E13 (BA1) must be set to "1" and E12 (BA0) must be set to "0" to select Extended Mode Register (vs. the base Mode Register)



# **Functional Description**

In general, this 256Mb SDRAM (2M x 32Bits x 4banks) is a multi-bank DRAM that operates at 1.8V and includes a synchronous interface (all signals are registered on the positive edge of the clock signal, CLK). Each of the 134,217,728-bit banks is organized as 8,192 rows by 512 columns by 32-bits

Read and write accesses to the SDRAM are burst oriented; accesses start at a selected location and continue for a programmed number of locations in a programmed sequence. Accesses begin with the registration of an ACTIVE command, which is then followed by a READ or WRITE command. The address bits registered coincident with the ACTIVE command are used to select the bank and row to be accessed (BA0-BA1 select the bank, A0-A11 select the row). The address bits (BA0-BA1 select the bank, A0-A8 select the column) registered coincident with the READ or WRITE command are used to select the starting column location for the burst access. Prior to normal operation, the SDRAM must be initialized. The following sections provide detailed information covering device initialization, register definition, command descriptions and device operation.

#### **Power up and Initialization**

SDRAMs must be powered up and initialized in a predefined manner. Operational procedures other than those specified may result in undefined operation. Once power is applied to VDD and VDDQ(simultaneously) and the clock is stable(stable clock is defined as a signal cycling within timing constraints specified for the clock pin), the SDRAM requires a 100µs delay prior to issuing any command other than a COMMAND INHIBIT or NOP. CKE must be held high during the entire initialization period until the PRECHARGE command has been issued. Starting at some point during this 100µs period and continuing at least through the end of this period, COMMAND INHIBIT or NOP commands should be applied.

Once the 100µs delay has been satisfied with at least one COMMAND INHIBIT or NOP command having been applied, a PRECHARGE command should be applied. All banks must then be precharged, thereby placing the device in the all banks idle state.

Once in the idle state, two AUTO REFRESH cycles must be performed. After the AUTO REFRESH cycles are complete, the SDRAM is ready for mode register programming. Because the mode register will power up in an unknown state, it should be loaded prior to applying any operational command. And a extended mode register set command will be issued to program specific mode of self refresh operation(PASR). The following these cycles, the Mobile SDRAM is ready for normal operation.

# **Register Definition**

#### **Mode Register**

The mode register is used to define the specific mode of operation of the SDRAM. This definition includes the selection of a burst length, a burst type, a CAS latency, an operating mode and a write burst mode. The mode register is programmed via the LOAD MODE REGISTER command and will retain the stored information until it is programmed again or the device loses power.

Mode register bits M0-M2 specify the burst length, M3 specifies the type of burst (sequential or interleaved), M4-M6 specify the CAS latency, M7 and M8 specify the operating mode, M9 specifies the write burst mode, and M10-M12 should be set to zero. M13 and M14 should be set to zero to prevent extended mode register.

The mode register must be loaded when all banks are idle, and the controller must wait the specified time before initiating the subsequent operation. Violating either of these requirements will result in unspecified operation.

#### **Extended Mode Register**

The Extended Mode Register controls the functions beyond those controlled by the Mode Register. These additional functions are special features of the BATRAM device. They include Partial Array Self Refresh (PASR) and Driver Strength (DS).

The Extended Mode Register is programmed via the Mode Register Set command and retains the stored information until it is programmed again or the device loses power.

The Extended Mode Register must be programmed with E8 through E12 set to "0". Also, E13 (BA0) must be set to "0", and E14 (BA1) must be set to "1". The Extended Mode Register must be loaded when all banks are idle and no bursts are in progress, and the controller must wait the specified time before initiating any subsequent operation. Violating either of these requirements results in unspecified operation.



#### **Burst Length**

Read and write accesses to the SDRAM are burst oriented, with the burst length being programmable, as shown in Figure 1. The burst length determines the maximum number of column locations that can be accessed for a given READ or WRITE command. Burst lengths of 1, 2, 4 or 8 locations are available for both the sequential and the interleaved burst types, and a full-page burst is available for the sequential type. The full-page burst is used in conjunction with the BURST TERMINATE command to generate arbitrary burst lengths.

Reserved states should not be used, as unknown operation or incompatibility with future versions may result. When a READ or WRITE command is issued, a block of columns equal to the burst length is effectively selected. All accesses for that burst take place within this block, meaning that the burst will wrap within the block if a boundary is reached. The block is uniquely selected by A1-A8 when the burst length is set to two; by A2-A8 when the burst length is set to four; and by A3-A8 when the burst length is set to eight. The remaining (least significant) address bit(s) is (are) used to select the starting location within the block. Full-page bursts wrap within the page if the boundary is reached.

#### Bank(Row) Active

The Bank Active command is used to activate a row in a specified bank of the device. This command is initiated by activating CS, RAS and deasserting CAS, WE at the positive edge of the clock. The value on the BA0-BA1 selects the bank, and the value on the A0-A11 selects the row.

This row remains active for column access until a precharge command is issued to that bank. Read and write operations can only be initiated on this activated bank after the minimum tRCD time is passed from the activate command.

#### Read

The READ command is used to initiate the burst read of data. This command is initiated by activating CS, CAS, and deasserting WE, RAS at the positive edge of the clock. BA0-BA1 input select the bank, A0-A8 address inputs select the starting column location. The value on input A10 determines whether or not Auto Precharge is used. If Auto Precharge is selected the row being accessed will be precharged at the end of the READ burst; if Auto Precharge is not selected, the row will remain active for subsequent accesses. The length of burst and the CAS latency will be determined by the values programmed during the MRS command.

#### Write


The WRITE command is used to initiate the burst write of data. This command is initiated by activating CS, CAS, WE and deasserting RAS at the positive edge of the clock. BA0-BA1 input select the bank, A0-A8 address inputs select the starting column location. The value on input A10 determines whether or not Auto Precharge is used. If Auto Precharge is selected the row being accessed will be precharged at the end of the WRITE burst; if Auto Precharge is not selected, the row will remain active for subsequent accesses.




#### CAS Latency

The CAS latency is the delay, in clock cycles, between the registration of a READ command and the availability of the first piece of output data. The latency can be set to two or three clocks. If a READ command is registered at clock edge n, and the latency is m clocks, the data will be available by clock edge n + m. The DQs will start driving as a result of the clock edge one cycle earlier (n + m - 1), and provided that the relevant access times are met, the data will be valid by clock edge n + m. For example, assuming that the clock cycle time is such that all relevant access times are met, if a READ command is registered at T0 and the latency is programmed to two clocks, the DQs will start driving after T1 and the data will be valid by T2, as shown in Figure 6. Reserved states should not be used as unknown operation or incompatibility with future versions may result.

# Figure 6: CAS Latency

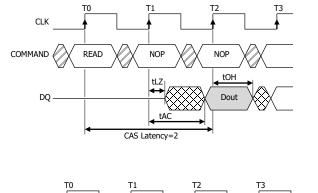

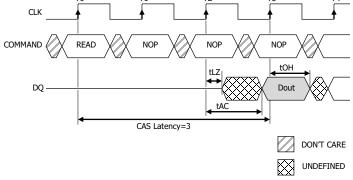

#### **Operating Mode**

The normal operating mode is selected by setting M7 and M8 to zero; the other combinations of values for M7 and M8 are reserved for future use and/or test modes. The programmed burst length applies to both READ and WRITE bursts. Test modes and reserved states should not be used because unknown operation or incompatibility with future versions may result.

#### Write Burst Mode

When M9 = 0, the burst length programmed via M0-M2 applies to both READ and WRITE bursts; when M9 = 1, the programmed burst length applies to READ bursts, but write accesses are single-location (nonburst) accesses.



# **Table 3: Command Truth Table**

Function	CKEn-1	CKEn	/CS	/RAS	/CAS	/WE	DQM	ADDR	A10	Note
Command Inhinit (NOP)	Н	Х	Н	Х	Х	х	х	Х	•	
No Operation (NOP)	Н	Х	L	Н	Н	н	х	х		
Mode Register Set	Н	Х	L	L	L	L	х	OP COI	DE	4
Extended Mode Register Set	Н	Х	L	L	L	L	х	OP CODE		4
Active (select bank and activate row)	Н	х	L	L	Н	н	x	Bank/Row		
Read	Н	Х	L	н	L	Н	L/H	Bank/Col	L	5
Read with Autoprecharge	Н	Х	L	н	L	Н	L/H	Bank/Col	Н	5
Write	Н	Х	L	н	L	L	L/H	Bank/Col	L	5
Write with Autoprecharge	Н	Х	L	н	L	L	L/H	Bank/Col	Н	5
Precharge All Banks	Н	Х	L	L	Н	L	х	х	Н	
Precharge Selected Bank	Н	Х	L	L	Н	L	х	Bank	L	
Burst Stop	Н	н	L	н	Н	L	х	x		
Auto Refresh	Н	н	L	L	L	Н	х	х		3
Self Refresh Entry	Н	L	L	L	L	н	х	х		3
Self Refresh Exit	L	н	н	Х	Х	Х	x	x		2
	_		L	Н	Н	н				
Precharge Power Down Entry	н	L	Н	Х	Х	х	x	x		
Treatinger offer Domin Entry		-	L	Н	Н	н	~	~		
Precharge Down Exit	L	н	Н	Х	Х	х	_ x	x		
Treaturge Down Exit			L	Н	Н	Н	~			
Clock Suspend Entry	н	L	Н	Х	Х	х	_ x	x		
			L	V	V	v	^	^		
Clock Suspend Exit	L	Н			Х		Х	Х		
Deep Power Down Entry	Н	L	L	Н	Н	L	Х	Х		6
Deep Power Down Exit	L	н			Х		Х	Х		

Note :

1. CKEn is the logic state of CKE at clock edge n; CKEn-1 was the state of CKE at the previous clock edge.

H: High Level, L: Low Level, X: Don't Care, V: Valid

- 2. Exiting Self Refresh occurs by asynchronously bringing CKE from low to high and will put the device in the all banks idle state once tXSR is met. Command Inhibit or NOP commands should be issued on any clock edges occuring during the tXSR period. A minimum of two NOP commands must be provided during tXSR period.
- 3. During refresh operation, internal refresh counter controls row addressing; all inputs and I/Os are "Don't Care" except for CKE.
- 4. A0-A11 define OP CODE written to the mode register, and BA must be issued 0 in the mode register set, and 1 in the extended mode register set.
- 5. DQM "L" means the data Write/Ouput Enable and "H" means the Write inhibit/Output High-Z. Write DQM Latency is 0 CLK and Read DQM Latency is 2 CLK.
- 6. Standard SDRAM parts assign this command sequence as Burst Terminate. For Bat Ram parts, the Burst Terminate command is assigned to the Deep Power Down function.



# IS42/45VM32800M

# **Table 4: Function Truth Table**

Current					Comm	and		<b>A</b> - <b>k</b> i - <b>x</b>	Nata
State	/CS	/RAS	/CAS	/WE	BA	A0-A11	Description	Action	Note
	L	L	L	L		OP CODE	Mode Register Set	Set the Mode Register	14
	L	L	L	Н	х	x	Auto or Self Refresh	Start Auto or Self Refresh	5
	L	L	Н	L	BA	Х	Precharge	No Operation	
Idle	L	L	Н	Н	BA	Row Add.	Bank Activate	Activate the Specified Bank and Row	
	L	Н	L	L	BA	Col Add./ A10	Write/WriteAP	ILLEGAL	4
	L	Н	L	Н	BA	Col Add./ A10	Read/ReadAP	ILLEGAL	4
	L	Н	Н	Н	х	Х	No Operation	No Operation	3
	Н	х	Х	х	х	x	Device Deselect	No Operation or Power Down	3
	L	L	L	L		OP CODE	Mode Register Set	ILLEGAL	13,14
	L	L	L	Н	Х	Х	Auto or Self Refresh	ILLEGAL	13
	L	L	Н	L	BA	Х	X Precharge Precharg		7
	L	L	Н	Н	BA	Row Add.	Bank Activate	ILLEGAL	4
Row Active	L	н	L	L	BA	Col Add./A10 Write/Write AP		Start Write : Optional AP(A10=H)	6
	L	н	L	Н	BA	Col Add./A10	Read/Read AP	Start Read : Optional AP(A10=H)	6
	L	Н	Н	Н	х	Х	No Operation	No Operation	
	н	Х	Х	Х	Х	Х	Device Deselect	No Operation	
	L	L	L	L		OP CODE	Mode Register Set	ILLEGAL	13,14
	L	L	L	Н	Х	Х	Auto or Self Refresh	ILLEGAL	13
	L	L	Н	L	BA	х	Precharge	Termination Burst : Start the Precharge	
	L	L	Н	н	BA	Row Add.	Bank Activate	ILLEGAL	4
Read	L	н	L	L	BA	Col Add./A10	Write/WriteAP	Termination Burst : Start Write(AP)	8,9
	L	н	L	Н	BA	Col Add./A10	Read/Read AP	Terimination Burst : Start Read(AP)	8
	L	н	Н	н	х	Х	No Operation	Continue the Burst	
	Н	х	х	х	x	х	Device Deselect	Continue the Burst	



Current					Comm	and		Astion	Nata
State	/CS	/RAS	/CAS	/WE	BA	A0-A11	Description	Action	Note
	L	L	L	L		OP CODE	Mode Register Set	ILLEGAL	13,14
	L	L	L	Н	Х	Х	Auto or Self Refresh	ILLEGAL	13
	L	L	н	L	BA	х	Precharge	Termination Burst : Start the Precharge	10
	L	L	Н	Н	BA	Row Add.	Bank Activate	ILLEGAL	4
Write	L	Н	L	L	BA	Col Add./A10	Write/WriteAP	Termination Burst : Start Write(AP)	8
	L	Н	L	н	BA	Col Add./A10	Read/ReadAP	Terimination Burst : Start READ(AP)	8,9
	L	Н	Н	н	Х	Х	No Operation	Continue the Burst	
	н	Х	Х	Х	х	Х	Device Deselect	Continue the Burst	
	L	L	L	L		OP CODE	Mode Register Set	ILLEGAL	13,14
	L	L	L	Н	Х	Х	Auto or Self Refresh	ILLEGAL	13
	L	L	Н	L	BA	Х	Precharge	ILLEGAL	4,12
Read with	L	L	Н	н	BA	Row Add.	Bank Activate	ILLEGAL	4,12
Auto	L	Н	L	L	BA	Col Add./A10	Write/WriteAP	ILLEGAL	12
Precharge	L	Н	L	н	BA	Col Add./A10	Read/ReadAP	ILLEGAL	12
	L	Н	Н	н	Х	Х	No Operation	Continue the Burst	
	н	Х	Х	х	Х	Х	Device Deselect	Continue the Burst	
	L	L	L	L		OP CODE	Mode Register Set	ILLEGAL	13,14
	L	L	L	Н	Х	Х	Auto or Self Refresh	ILLEGAL	13
\\/# <del>`</del> +~	L	L	Н	L	BA	Х	Precharge	ILLEGAL	4,12
Write with	L	L	Н	н	BA	Row Add.	Bank Activate	ILLEGAL	4,12
Auto	L	Н	L	L	BA	Col Add./A10	Write/WriteAP	ILLEGAL	12
Precharge	L	Н	L	н	BA	Col Add./A10	Read/ReadAP	ILLEGAL	12
	L	Н	Н	Н	Х	Х	No Operation	Continue the Burst	
	н	Х	Х	Х	х	х	Device Deselect	Continue the Burst	

# Table 4: Function Truth Table (Continued)



Table 4: Fu	nction	Truth	Table (	Contin	ued)				
Current			-		Comm	and		Action	Note
State	/CS	/RAS	/CAS	/WE	BA	A0-A11	Description	Action	Note
	L	L	L	L		OP CODE	Mode Register Set	ILLEGAL	13,14
	L	L	L	н	х	Х	Auto or Self Refresh	ILLEGAL	13
	L	L	Н	L	BA	x	Precharge	No Operation : Bank(s) Idle after tRP	
	L	L	Н	н	BA	Row Add.	Bank Activate	ILLEGAL	4,12
Precharging	L	Н	L	L	BA Col Add./ A10		Write/WriteAP	ILLEGAL	4,12
	L	Н	L	н	BA	Col Add./ A10	Read/ReadAP	ILLEGAL	4,12
	L	Н	н	н	x x		No Operation	No Operation : Bank(s) Idle after tRP	
	н	х	х	х	x x		Device Deselect	No Operation : Bank(s) Idle after tRP	
	L	L	L	L		OP CODE	Mode Register Set	ILLEGAL	13,14
	L	L	L	н	х	Х	Auto or Self Refresh	ILLEGAL	13
	L	L	н	L	BA	Х	Precharge	ILLEGAL	4,12
	L	L	Н	н	BA	Row Add.	Bank Activate	ILLEGAL	4,11,12
Row Activating	L	Н	L	L	BA	Col Add./A10	Write/Write AP	ILLEGAL	4,12
Activiting	L	Н	L	н	BA	Col Add./A10	Read/Read AP	ILLEGAL	4,12
	L	Н	н	н	х	x	No Operation	No Operation : ROw Active after tRCD	
	Н	х	х	х	х	x	Device Deselect	No Operation : ROw Active after tRCD	
	L	L	L	L		OP CODE	Mode Register Set	ILLEGAL	13,14
	L	L	L	н	х	Х	Auto or Self Refresh	ILLEGAL	13
	L	L	н	L	BA	Х	Precharge	ILLEGAL	4,13
	L	L	н	н	BA	Row Add.	Bank Activate	ILLEGAL	4,12
Write Recovering	L	Н	L	L	BA	Col Add./A10	Write/WriteAP	Start Write : Optional AP(A10=H)	
	L	Н	L	н	BA	Col Add./A10	Read/Read AP	Start Write : Optional AP(A10=H)	9
	L	Н	н	н	х	x	No Operation	No Operation : Row Active after tDPL	
	н	х	х	х	х	х	Device Deselect	No Operation : Row Active after tDPL	

able 4: Fun	ICTION	Iruth I	able (C	ontinu	ea)				
Current				-	Comn	and		Action	Note
State	/CS	/RAS	/CAS	/WE	BA	A0-A11	Description	Action	Note
	L	L	L	L		OP CODE	Mode Register Set	ILLEGAL	13,14
	L	L	L	Н	х	Х	Auto or Self Refresh	ILLEGAL	13
	L	L	Н	L	BA	Х	Precharge	ILLEGAL	4,13
Write Recovering	L	L	Н	н	BA	Row Add.	Bank Activate	ILLEGAL	4,12
with	L	Н	L	L	BA	Col Add./ A10	Write/WriteAP	ILLEGAL	4,12
Auto Precharge	L	Н	L	Н	BA	Col Add./ A10	Read/ReadAP	ILLEGAL	4,9,12
i i contar go	L	Н	Н	н	х	x	No Operation	No Operation : Precharge after tDPL	
	н	Х	Х	х	х	х	Device Deselect	No Operation : Precharge after tDPL	
	L	L	L	L		OP CODE	Mode Register Set	ILLEGAL	13,14
	L	L	L	Н	х	Х	Auto or Self Refresh	ILLEGAL	13
	L	L	Н	L	BA	Х	Precharge	ILLEGAL	13
	L	L	Н	Н	BA	Row Add.	Bank Activate	ILLEGAL	13
Refreshing	L	Н	L	L	BA	Col Add./A10	Write/Write AP	ILLEGAL	13
	L	Н	L	Н	BA	Col Add./A10	Read/Read AP	ILLEGAL	13
	L	Н	Н	н	х	х	No Operation	No Operation : Idle after tRC	
	н	х	х	х	х	х	Device Deselect	No Operation : Idle after tRC	
	L	L	L	L		OP CODE	Mode Register Set	ILLEGAL	13,14
	L	L	L	н	х	Х	Auto or Self Refresh	ILLEGAL	13
	L	L	Н	L	BA	Х	Precharge	ILLEGAL	13
Mada	L	L	Н	Н	BA	Row Add.	Bank Activate	ILLEGAL	13
Mode Register	L	Н	L	L	BA	Col Add./A10	Write/WriteAP	ILLEGAL	13
Accessing	L	Н	L	Н	BA	Col Add./A10	Read/Read AP	ILLEGAL	13
	L	Н	Н	н	х	x	No Operation	No Operation : Idle after 2 Clock Cycle	
	н	х	х	х	х	х	Device Deselect	No Operation : Idle after 2 Clock Cycle	

# Table 4: Function Truth Table (Continued)



Note :

- 1. H: Logic High, L: Logic Low, X: Don't care, BA: Bank Address, AP: Auto Precharge.
- 2. All entries assume that CKE was active during the preceding clock cycle.
- 3. If both banks are idle and CKE is inactive, then in power down cycle
- 4. Illegal to bank in specified states. Function may be legal in the bank indicated by Bank Address, depending on the state of that bank.
- 5. If both banks are idle and CKE is inactive, then Self Refresh mode.
- 6. Illegal if tRCD is not satisfied.
- 7. Illegal if tRAS is not satisfied.
- 8. Must satisfy burst interrupt condition.
- 9. Must satisfy bus contention, bus turn around, and/or write recovery requirements.
- 10. Must mask preceding data which don't satisfy tDPL.
- 11. Illegal if tRRD is not satisfied
- 12. Illegal for single bank, but legal for other banks in multi-bank devices.
- 13. Illegal for all banks.
- 14. Mode Register Set and Extended Mode Register Set is same command truth table except BA.



<b></b>	C	CKE			Cor	nmand				
Current State	Prev Cycle	Current Cycle	/CS	/RAS	/CAS	/WE	BA	A0-A11	Action	Note
	Н	х	Х	Х	Х	Х	х	Х	INVALID	2
	L	н	н	х	х	х	х	х	Exit Self Refresh with Device Deselect	3
Self	L	н	L	н	н	н	х	Х	Exit Self Refresh with No Operation	3
Refresh	L	н	L	н	Н	L	х	х	ILLEGAL	3
	L	н	L	н	L	Х	х	х	ILLEGAL	3
	L	н	L	L	Х	Х	х	Х	ILLEGAL	3
	L	L	Х	Х	Х	х	х	Х	Maintain Self Refresh	
	Н	Х	Х	Х	Х	Х	х	Х	INVALID	2
			н	Х	Х	Х	х	х	Power Down Mode Exit, All	
	L	Н	L	Н	Н	Н	х	Х	Banks Idle	3
Power Down				L	Х	х	х	Х	ILLEGAL	
Domi	L	н	L	Х	L	х	х	Х		3
				Х	Х	L	х	Х		
	L	L	Х	Х	Х	х	х	Х	Maintain Power Down Mode	
	Н	х	Х	Х	Х	Х	х	Х	INVALID	2
Deep Power	L	н	Х	Х	Х	Х	х	Х	Deep Power Down Mode Exit	6
Down	L	L	х	Х	Х	Х	Х	Х	Maintain Deep Power Down Mode	
	Н	н	Н	Х	Х	Х			Refer to the Idle State	4
	Н	н	L	Н	Х	х			section of the Current State Truth Table	4
	Н	н	L	L	Н	х				4
	Н	н	L	L	L	н	х	Х	Auto Refresh	
All	Н	н	L	L	L	L		OP CODE	Mode Register Set	5
Banks	Н	L	Н	Х	Х	Х			Refer to the Idle State	4
Idle	Н	L	L	н	Х	Х			section of the Current State Truth Table	4
	Н	L	L	L	Н	Х				4
	Н	L	L	L	L	н	х	х	Entry Self Refresh	5
	Н	L	L	L	L	L		OP CODE	Mode Register Set	
	L	х	Х	Х	Х	Х	х	х	Power Down	5
Any	Н	н	х	Х	Х	х	х	Х	Refer to Operations of the Current State Truth Table	
State other	Н	L	х	Х	Х	х	х	Х	Begin Clock Suspend next cycle	
than listed above	L	Н	х	Х	х	х	Х	Х	Exit Clock Suspend next cycle	
	L	L	Х	х	Х	х	х	Х	Maintain Clock Suspend	



Note :

- 1. H: Logic High, L: Logic Low, X: Don't care
- 2. For the given current state CKE must be low in the previous cycle.
- 3. When CKE has a low to high transition, the clock and other inputs are re-enabled asynchronously. When exiting power down mode, a NOP (or Device Deselect) command is required on the first positive edge of clock after CKE goes high.
- 4. The address inputs depend on the command that is issued.
- 5. The Precharge Power Down mode, the Self Refresh mode, and the Mode Register Set can only be entered from the all banks idle state.
- 6. When CKE has a low to high transition, the clock and other inputs are re-enabled asynchronously. When exiting deep power down mode, a NOP (or Device Deselect) command is required on the first positive edge of clock after CKE goes high and is maintained for a minimum 100usec.

# Table 6: 1.8V Absolute Maximum Rating

Parameter	Symbol	Rating	Unit
Ambient Temperature (Industrial)		-40 ~ 85	
Ambient Temperature (Automotive, A1)	T <sub>A</sub>	-40 ~ 85	°C
Ambient Temperature (Automotive, A2)		-40 ~ 105	
Storage Temperature	T <sub>stg</sub>	-55 ~ 150	°C
Voltage on Any Pin relative to VSS	$V_{\text{in}}, V_{\text{out}}$	-1.0 ~ 2.6	V
Voltage on VDD relative to VSS	VDD, VDDQ	-1.0 ~ 2.6	V
Short Circuit Output Current	I <sub>OS</sub>	50	mA
Power Dissipation	P <sub>D</sub>	1	W

Note :

Stresses greater than those listed under "Absolute Maximum Ratings" may cause permanent damage to the device. This is a stress rating only, and functional operation of the device at these or any other conditions above those indicated in the operational sections of this specification is not implied. Exposure to absolute maximum rating conditions for extended periods may affect reliability.

# Table 7: 1.8V Capacitance (T<sub>A</sub>=25 °C, f=1MHz, VDD=1.8V)

Parameter	Pin	Symbol	Min	Max	Unit
	CLK	C <sub>I1</sub>	2	4	pF
Input Capacitance	A0~A11, BA0~BA1, CKE, /CS, /RAS, /CAS, /WE, DQM0~DQM3	C <sub>I2</sub>	2	4	pF
Data Input/Output Capacitance	DQ0~DQ31	C <sub>IO</sub>	3	5	pF

# Table 8: 1.8V DC Operating Condition (Voltage referenced to VSS=0V, T<sub>A</sub>:within specified temperature operating range.)

Parameter	Symbol	Min	Тур	Мах	Unit	Note
Power Supply Voltage	VDD	1.7	1.8	1.95	V	
rower Supply Voltage	VDDQ	1.7	1.8	1.95	V	1
Input High Voltage	V <sub>IH</sub>	0.8 x VDDQ	-	VDDQ+0.3	V	2
Input Low Voltage	V <sub>IL</sub>	-0.3	0	0.3	v	3
Output High Voltage	V <sub>OH</sub>	0.9 x VDDQ	-	-	V	I <sub>OH</sub> = -0.1mA
Output Low Voltage	V <sub>OL</sub>	-	-	0.2	V	$I_{OL}$ = +0.1mA
Input Leakage Current	$I_{LI}$	-1	-	1	uA	4
Output Leakage Current	I <sub>LO</sub>	-1.5		1.5	uA	5

Note :

1. VDDQ must not exceed the level of VDD

2. VIH(max) = VDDQ+1.5V AC. The overshoot voltage duration is  $\leq$  3ns.

3. VIL(min) = -1.0V AC. The overshoot voltage duration is  $\leq$  3ns.


4. Any input  $0V \le VIN \le VDDQ$ .


Input leakage currents include Hi-Z output leakage for all bi-directional buffers with tri-state outputs.

5. DOUT is disabled,  $0V \le VOUT \le VDDQ$ .

<b>able 9: 1.8V AC Operating Condition</b> (T <sub>A</sub> :within specified temperature operating range, VDD = 1.7V-1.95V, VSS=0V)

Parameter	Symbol	Тур	Unit
AC Input High/Low Level Voltage	V <sub>IH</sub> / V <sub>IL</sub>	0.9 x VDDQ / 0.2	V
Input Timing Measurement Reference Level Voltage	V <sub>TRIP</sub>	0.5 x VDDQ	V
Input Rise / Fall Time	t <sub>R</sub> / t <sub>F</sub>	1 / 1	ns
Output Timing Measurement Reference Level Voltage	V <sub>OUTREF</sub>	0.5 x VDDQ	V
Output Load Capacitance for Access Time Measurement	CL	30	pF

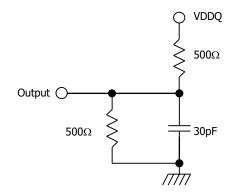

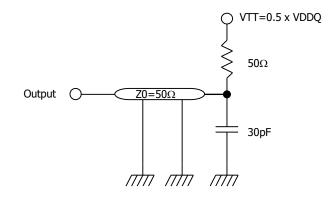

DC Output Load Circuit

AC Output Load Circuit



Table 10: 1.8V DC Characteristic (DC operating conditions unless otherwise noted)											
Parameter		Sym Test Condition		S	beed	Unit	Note				
		Sym		-5	-6	Unit	Note				
Operating	) Current			IDD1	Burst Length=1, One Bank Active, tRC $\geq$ tRC(min) IOL = 0 mA		90	mA	1		
	e Standby		85°C			300		μA			
Current in Power	Down Mode		105°C	IDD2P	CKE $\leq$ VIL(max), tCK = 10ns	600					
	e Standby		85°C		CKE $\geq$ VIH(min), /CS $\geq$ VIH(min), tCK = 10ns		10				
Down Mo	n Non Powei de		105°C	IDD2N	Input signals are changed one time during 2 clks.		16	mA			
Active Sta	andby Curre	nt	85°C		CKE < MI (max) + CK = 10ma All banks active	5					
	Down Mode		105°C	IDD3P	CKE $\leq$ VIL(max), tCK = 10ns, All banks active.		6	mA			
	andby Curre wer Down	nt	85°C	IDD3N	$CKE \ge VIH(min)$ , $/CS \ge VIH(min)$ , $tCK = 10ns$ Input signals are changed one time during 2 clks,	20		mA			
Mode			105°C	IDDSN	All banks active.	21		IIIA			
		85°C	IDD4 (R)		105	105					
Burst Mode Operating Current	]	105°C		tCK>tCK(min), IOL = 0 mA, Page Burst All Banks Activated, tCCD = 1 clk			mA	1			
Current			85°C 105°C		IDD4 (W)	105			105		
Auto Refresh Current (8K Cycle)		IDD5	tRC $\geq$ tRFC(min), All Banks Active	110		mA	2				
PASR TCSR											
	4 Banks	85°C		85°C				700 550 600			
	4 DdHKS		45°C								
	2 Banks		85°C	-		4					
Self Refresh Current 1 Bank			45°C			450			4		
		85°C 45°C	IDD6	CKE ≤ 0.2V	550 μ 400		μA	4			
		45°C			500		-				
Half Bank		45°C	-		350 450						
Quarter			85°C						1		
	Bank		45°C				300				
Deep Pow			85°C	IDD7			10	μΑ	3,4		
Mode Cur	rent		105°C			15		μα			

Notes :

1. Measured with outputs open.

2. Refresh period is 64ms.

3. Typical at room temperature.

4. Self Refresh mode and Deep Power Down are not supported for A2 grade with  $T_{\rm A}{>}85^{\circ}\text{C}.$ 

Davamatar	-5		-	-6		Nata		
Parameter	Sym	Min	Max	Min	Max	Unit	Note	
CLK Ovela Time		tCK3	5.0	1000	6.0	1000		
CLK Cycle Time	CL = 2	tCK2	8	1000	10	1000		
	CL = 3	tAC3		4.5		5.5	1	
Access time from CLK (pos. edge)	CL = 2	tAC2		6.5		8	1	2
CLK High-Level Width		tCH	2.2	015	2.5		1	3
CLK Low-Level Width		tCL	2.2		2.5		1	3
CKE Setup Time		tCKS	1.3		1.5		1	
CKE Hold Time		tCKH	0.8		1.0		1	<u> </u>
/CS, /RAS, /CAS, /WE, DQM Setup T	ime	tCMS	1.3		1.5		1	<u> </u>
/CS, /RAS, /CAS, /WE, DQM Hold Tir		tCMH	0.8		1.0		1	<u> </u>
Address Setup Time		tAS	1.3		1.5		1	<u> </u>
Address Hold Time		tAH	0.8		1.0		1	<u> </u>
Data-In Setup Time		tDS	1.3		1.5		ns	
Data-In Hold Time		tDH	0.8		1.0		1	
Data-Out High-Impedance Time	CL = 3	tHZ3		4.5		5.5	1	
from CLK (pos.edge)	CL = 2	tHZ2		6.5		8	1	4
Data-Out Low-Impedance Time		tLZ	0.8		1.0		1	<u> </u>
Data-Out Hold Time (load)		tOH	2.1		2.5		1	<u> </u>
Data-Out Hold Time (no load)		tOHN	1.5		1.8		1	<u> </u>
ACTIVE to PRECHARGE command		tRAS	42	100K	42	100K	1	<u> </u>
PRECHARGE command period	tRP	18		18				
ACTIVE bank a to ACTIVE bank a co	mmand	tRC	60		60		1	5
ACTIVE bank a to ACTIVE bank b co		tRRD	12		12		1	
ACTIVE to READ or WRITE delay		tRCD	18		18		1	
READ/WRITE command to READ/WR command	RITE	tCCD	1		1		CLK	6
WRITE command to input data delay	/	tDWD	0		0		1	6
Data-in to PRECHARGE command		tDPL	15		15			7
Data-in to ACTIVE command		tDAL	30		30		ns	7
DQM to data high-impedance during	READs	tDQZ	2		2			6
DQM to data mask during WRITEs		tDQM	0		0		1	6
LOAD MODE REGISTER command to or REFRESH command	ACTIVE	tMRD	2		2			8
Data-out to high-impedance from	CL = 3	tROH3	3		3			
PRECHARGE command	CL = 2	tROH2	2		2		]	6
Last data-in to burst STOP command		tBDL	1		1			6
Last data-in to new READ/WRITE co	tCDL	1		1			6	
CKE to clock disable or power-down mode	tCKED	1		1			9	
CKE to clock enable or power-down setup mode	tPED	1		1		CLK	9	
Refresh period (8,192 rows)	tREF		64		64	ms	11	
AUTO REFRESH period	tRFC	80		80			5	
Exit SELF REFRESH to ACTIVE comm	tXSR	80		80			5	
Transition time	tT	0.5	1.2	0.5	1.2	ns		
Write Recovery time		tWR	15		15			[

# Table 11: AC Characteristic (AC operation conditions unless otherwise noted)



Note :

- 1. The clock frequency must remain constant (stable clock is defined as a signal cycling within timing constraints specified for the clock pin) during access or precharge states (READ, WRITE, including tDPL, and PRECHARGE commands). CKE may be used to reduce the data rate.
- 2. tAC at CL = 3 with no load is 5.5ns and is guaranteed by design. Access time to be measured with input signals of 1V/ns edge rate, from 0.8V to 0.2V. If tR > 1ns, then (tR/2-0.5)ns should be added to the parameter.
- 3. AC characteristics assume tT = 1ns. If tR & tF > 1ns, then [(tR+tF)/2-1]ns should be added to the parameter.
- 4. tHZ defines the time at which the output achieves the open circuit condition; it is not a reference to VOH or VOL. The last valid data element will meet tOH before going High-Z.
- 5. Parameter guaranteed by design.
- 6. Required clocks are specified by JEDEC functionality and are not dependent on any timing parameter.
- 7. Timing actually specified by tDPL plus tRP; clock(s) specified as a reference only at minimum cycle rate
- 8. JEDEC and PC100 specify three clocks.
- 9. Timing actually specified by tCKs; clock(s) specified as a reference only at minimum cycle rate.
- 10. A new command can be given tRC after self refresh exit.

11. The specification in the table for tREF is applicable for all temperature grades with  $T_A \le +85^{\circ}$ C. Only A2 automotive temperature grade supports operation with  $T_A > +85^{\circ}$ C, and this value must be further constrained with a maximum tREF of 16ms.

# **Special Operation for Low Power Consumption**

#### **Temperature Compensated Self Refresh**

Temperature Compensated Self Refresh allows the controller to program the Refresh interval during SELF REFRESH mode, according to the case temperature of the Mobile SDRAM device. This allows great power savings during SELF REFRESH during most operating temperature ranges. Only during extreme temperatures would the controller have to select a TCSR level that will guarantee data during SELF REFRESH.

Every cell in the DRAM requires refreshing due to the capacitor losing its charge over time. The refresh rate is dependent on temperature. At higher temperatures a capacitor loses charge quicker than at lower temperatures, requiring the cells to be refreshed more often. Historically, during Self Refresh, the refresh rate has been set to accommodate the worst case, or highest temperature range expected.

Thus, during ambient temperatures, the power consumed during refresh was unnecessarily high, because the refresh rate was set to accommodate the higher temperatures.

This temperature compensated refresh rate will save power when the DRAM is operating at normal temperatures.

#### **Partial Array Self Refresh**


For further power savings during SELF REFRESH, the PASR feature allows the controller to select the amount of memory that will be refreshed during SELF REFRESH. The refresh options are All Banks, Two Banks (bank a and b), One Bank (bank a), Half of One Bank (1/2 of bank a), or Quarter of One Bank (1/4 of bank a). WRITE and READ commands can still occur during standard operation, but only the selected banks will be refreshed during SELF REFRESH. Data in banks that are disabled will be lost.

#### **Deep Power Down**


Deep Power Down is an operating mode to achieve maximum power reduction by eliminating the power of the whole memory array of the devices. Data will not be retained once the device enters Deep Power Down Mode.

This mode is entered by having all banks idle then /CS and /WE held low with /RAS and /CAS held high at the rising edge of the clock, while CKE is low. This mode is exited by asserting CKE high.



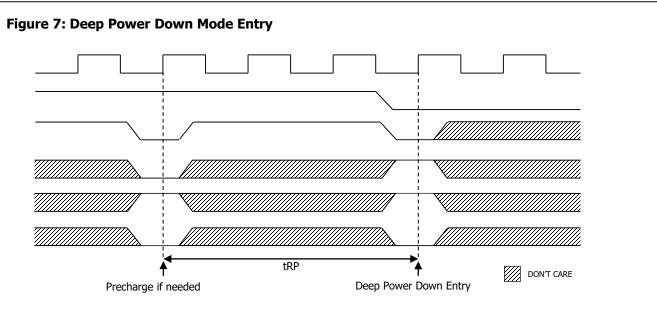



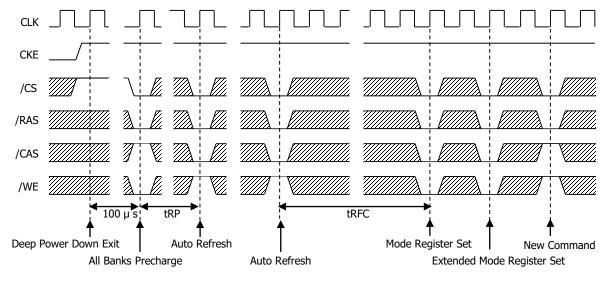

DON'T CARE

# Ordering Information – VDD = 1.8V

# Industrial Range: (-40°C to +85°C)

Configuration	Frequency (MHz)	Speed (ns)	Order Part No.	Package
8Mx32	200	5	IS42VM32800M-5BLI	90-ball BGA, Lead-free
	166	6	IS42VM32800M-6BLI	90-ball BGA, Lead-free

# Automotive (A1) Range: (-40°C to +85°C)

Configuration	Frequency (MHz)	Speed (ns)	Order Part No.	Package
8Mx32	200	5	IS45VM32800M-5BLA1	90-ball BGA, Lead-free
	166	6	IS45VM32800M-6BLA1	90-ball BGA, Lead-free

# Automotive (A2) Range: (-40°C to +105°C)

Configuration	Frequency (MHz)	Speed (ns)	Order Part No.	Package
8Mx32	200	5	IS45VM32800M-5BLA2	90-ball BGA, Lead-free
	166	6	IS45VM32800M-6BLA2	90-ball BGA, Lead-free



#### Figure9: 90Ball FBGA Configuration DATE 08/14/2008 1. CONTROLLING DIMENSION : MM . 2. Reference document : JEDEC MO-207 0.016 7.90 8.00 8.10 0.311 0.315 0.319 0.047 0.40 0.45 0.50 0.016 0.018 0.020 DIMENSION IN MM DIMENSION IN INCH MIN, NOM, MAX, MIN, NOM, MAX 12.90 13.00 13.10 0.508 0.512 0.516 0.315 BSC. 0.441 BSC. 0.252 BSC. 0.035 REF. 0.032 REF. 0.004 0.40 0.010 1.20 11.20 BSC. 6.40 BSC. 0.80 BSC. 0.9 REF. 0.8 REF. 0.10 NOTE: മ 0.25 SYNBOL ∢ REV. 0.45 90L 8x13mm TF-BGA Package Outline Я DRNER Ball Diameter ∢ но н и г т $\neg$ $\lor$ $\bot$ $\Sigma$ $\land$ $\Box$ $\land$ 0 сu m ę BOTTOM VIEW 4 μ ഗ ш 0.80 Ð E $\sim$ 00000000000000 00 ω Ð σ Pitch : ə az τa Ball A A U O U F O I P X P X F X ۲A ത 00 TOP VIEW w ம 4 ۲Ŷ) $\sim$ <del>.</del> – CORNER Å